

How to Install The Accordion Baffle Support

Let's use this reproduction of a single cell frame, pictured below, to demonstrate how to install a baffle support. Keep in mind that the frame pictured is just an example of a single cell within a bank of cells.



1. Tilt baffle support grid to insert two straight tines behind the frame (frame is part of existing spray booth).



2. Push grid into frame, sliding grid up or down so that the remaining two straight tines can also be positioned behind the frame.




3. Once all straight tines are behind the frame, slide the support up or down again to center it within the frame. (It doesn't need to be exact.)

TIP: if bent tines are too tight against the cell wall, remove grid and slightly bend bent tines inward by hand (just grab the opposing bent tines and squeeze together a bit). You want about 1/8" space between the tines and the frame - just enough space to tuck the baffle behind the tine. This is a one time adjustment.


*Back view of frame showing all four straight tines to the rear of the frame.

That's it!

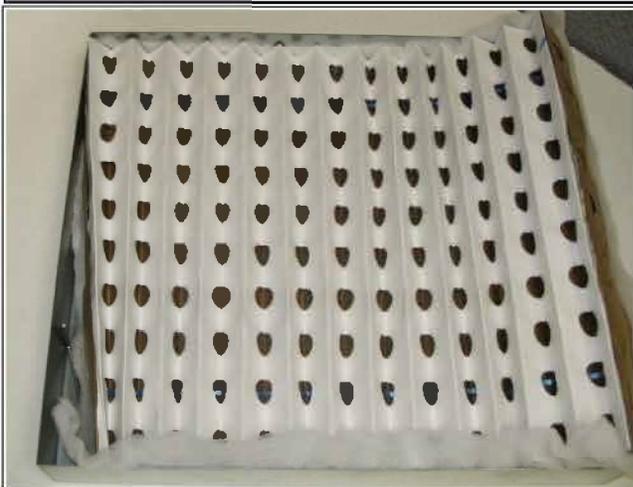


5. Install The Accordion baffle. Tuck the end pleats behind the bent tines. Tines may puncture polyester backing. That's ok. The baffle is held between the bent tines and the cell frame wall.

20BS: 20x20"
baffle support grid

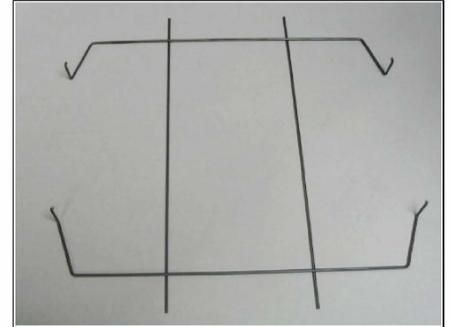

Also available:
25BS: 20x25" baffle support grid

FRONT & REAR VIEW OF AN INSTALLED PAINT BAFFLE

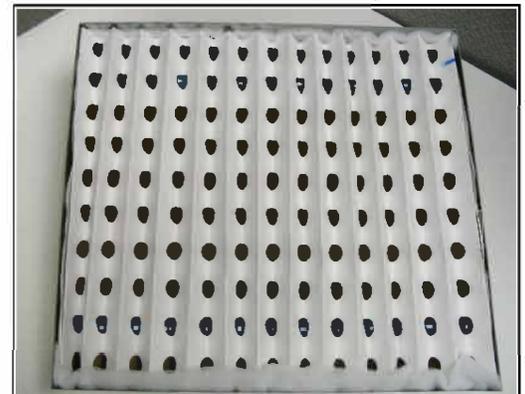

Technical support:
800-316-5751 toll free
580-220-8568 phone